## **INSTRUCTIVO CAMBIO CONTRASEÑA CABLEMODEM ARRIS TG852-TG862**

Ingresar con un navegador web (Chrome, Firefox, Edge) en la barra de dirección web a la siguiente dirección: <u>http://192.168.0.1</u>

	192.168.0.1	×	+		-	a ×
← → C ▲ No seguro   192.168.0.1					0• Å	
						39
ARRIS	Wireless HSD	Logout				
Login						
LOGIN	Login					
LOGIN	The default user name is 'admin'. Vali	id characters are	the numbers 0 to 9, the letters a	through z, and printable special characters (such		
	as \$, !, ?, &, #, @, and others.)					
	Login	jin				
	User Name		2			
	Password		3			
	Apply					

En user name ingresar: admin

En password para modelo TG852: password

En password para modelo TG862: 123456

Apretar Apply

		3 192.168.0.1	× +	- 0	×
← → C ▲ No seguro   192.168.0.1				0+ Q \$	+
	Doce Ontrol MMAL Cubic	(A) Catan Menhan Fo	1 Million		
	Bysic deap	Uvraeup meess Pe			^
	BASIC SETUP	System Basic Setup			
	BASIC SETUP	While your system has many configuration op		<b>.</b>	
	LOGIN SETTINGS	option to view a description of that option. Fo			
		Basic Setup			
		Language			
		Host Name	ARRISOW		
		Houding Enabled			
		THE SCALED VILL			
		Wireless			
		Enable Wreless	8		
		Wireless Network Name (SSID)	mm 2		
		Pre-Shared Key	1234567690		
		More Wreless Settings			
		2.4G WPS Settings			
		WPS Enable	<b>2</b> 3		
		Device PIN Code	26325910 0		
		WPS Mode			
		Enrollee PIN Code			
		Start WPS Association	(a) ,		
		Apply			*

En Wireless va a aparecer el nombre de la red wifi en wireless Network Name (SSID) donde va a poder cambiar el nombre de la red wifi.-

En Pre-Shared Key aparece la contraseña actual para la red wifi, modificar la misma por una nueva, una vez realizados todos los pasos apretar Apply para que tengan efecto los cambios realizados, luego de esto recordar olvidar la red antigua para poder ingresar los nuevos datos de conexión.-